

BACnet router

Instructions de montage


Montageanweisung


Montagevoorschrift

ISTRUZIONI DI MONTAGGIO

Instrucciones de montaje


Monteringsanvisning

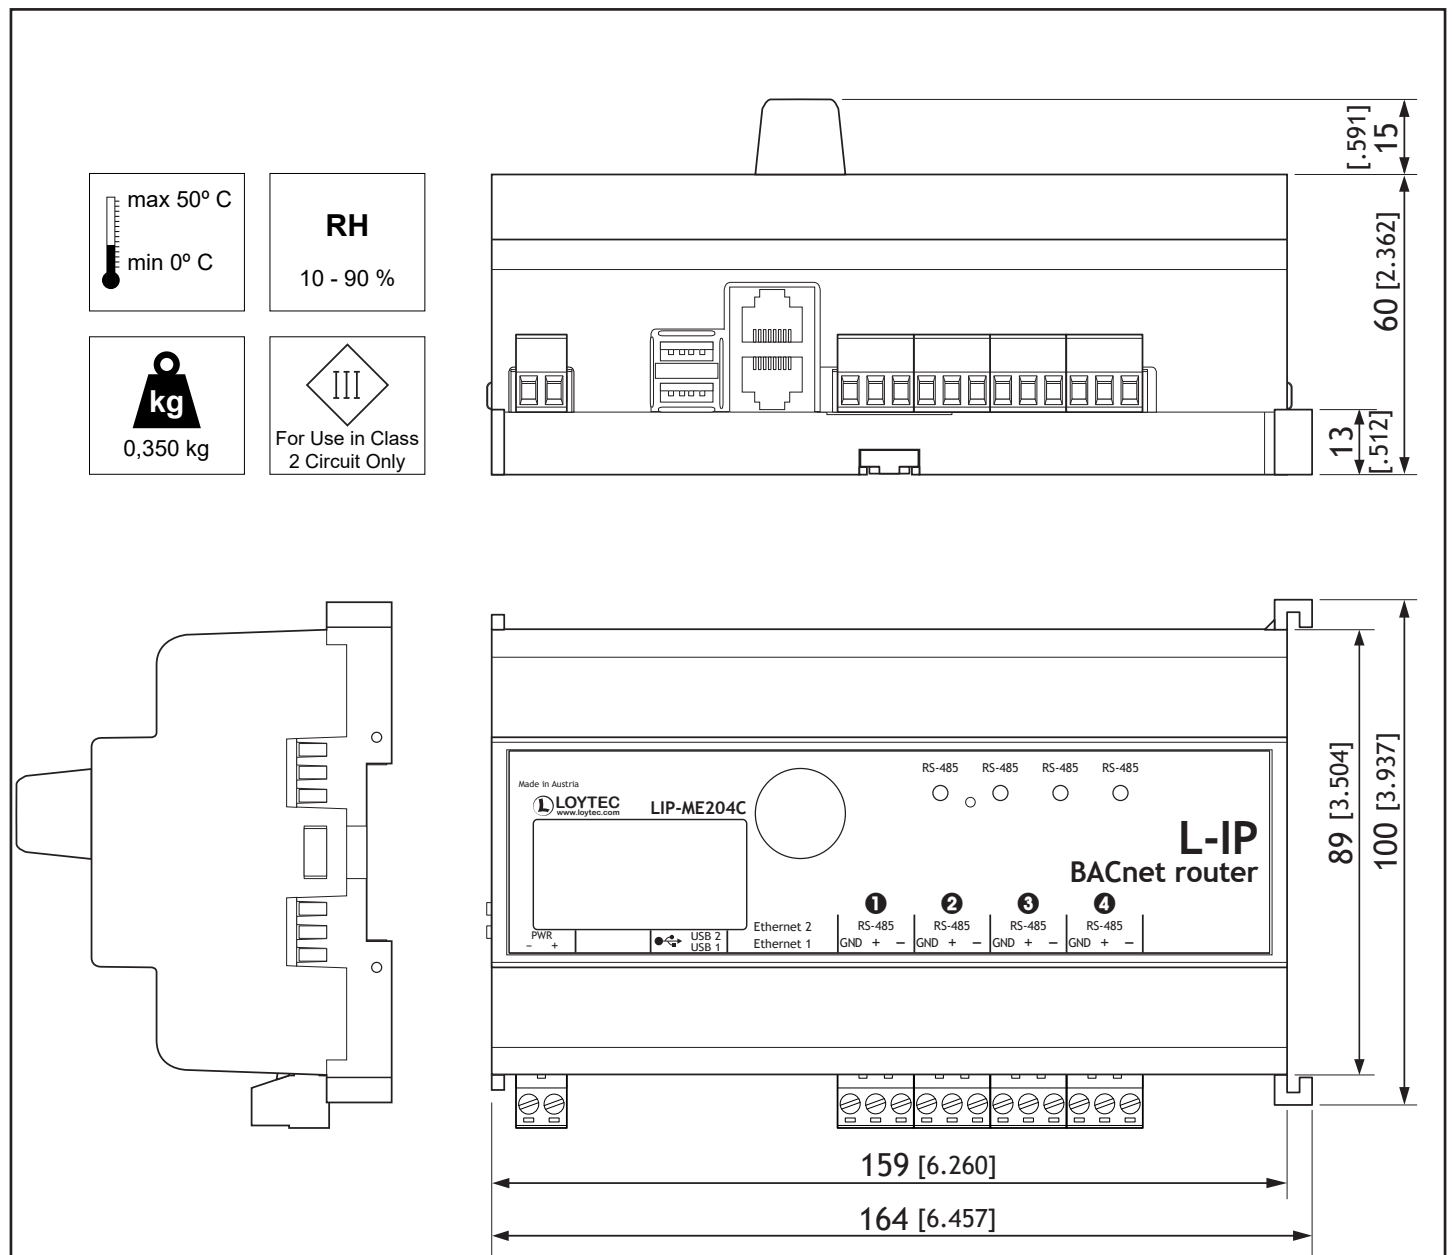

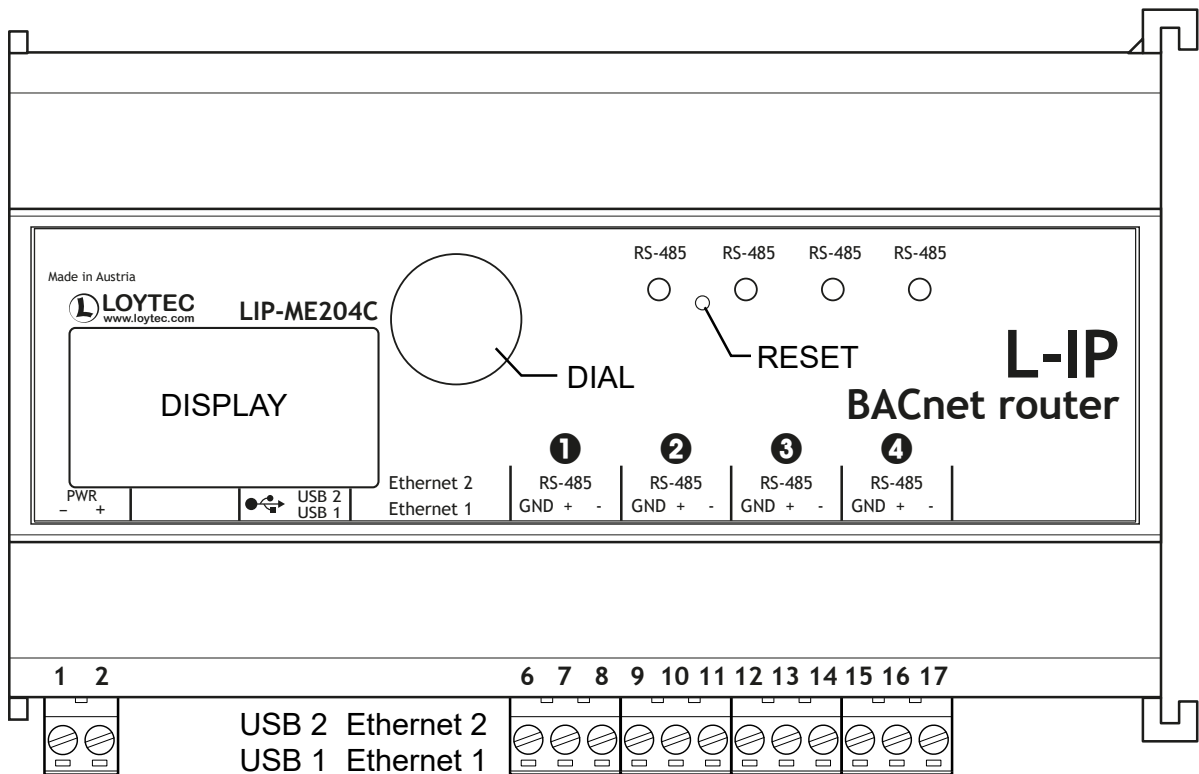

Connectors		
POWER 24 V DC/ VAC SELV	1	Power supply input -
	2	Power supply input +
		⚠ Input + must NOT be connected to EARTH GND
RS-485 PORT 1	6	GND
	7	+
	8	-
RS-485 PORT 2	9	GND
	10	+
	11	-
RS-485 PORT 3	12	GND
	13	+
	14	-
RS-485 PORT 4	15	GND
	16	+
	17	-

Connectors		
USB1	USB-A	USB Device
USB2	USB-A	USB Device
USB	μ-USB	PC
Ethernet1	RJ45	10/100Base-T
Ethernet2	RJ45	10/100Base-T
Buttons		
RESET	Reset	
DIAL	Turn-and-Push Dial	

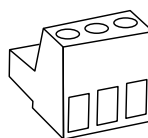



Weidmüller
BLZP 5.08/03/180
BLZP 5.08/02/180

4.5 lb-in/0.5 Nm

Weidmüller
BL 5.08

 0.2 - 2.5 mm²




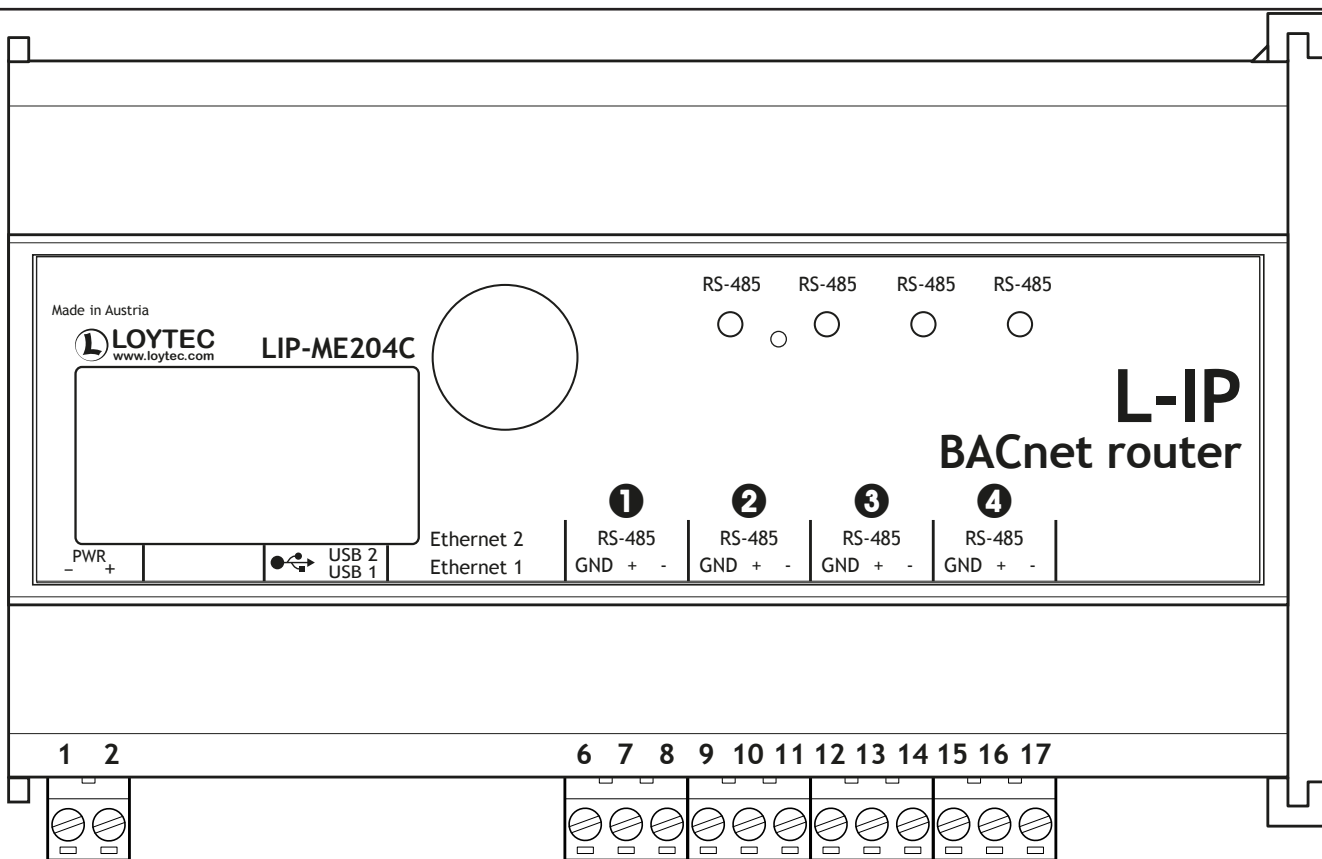

STATUS LEDs		
RS-485		
MS/TP	GREEN flashing fast	Token ok, traffic
	ORANGE flicker	Single master, traffic
	RED permanent	Token lost, cable damage
	RED flashing fast	Communication errors

Please update the firmware of the device first,
see www.loytec.com

35 mm x 7.5 mm DIN rail (EN 50022, BS 5584, DIN 46277-3)

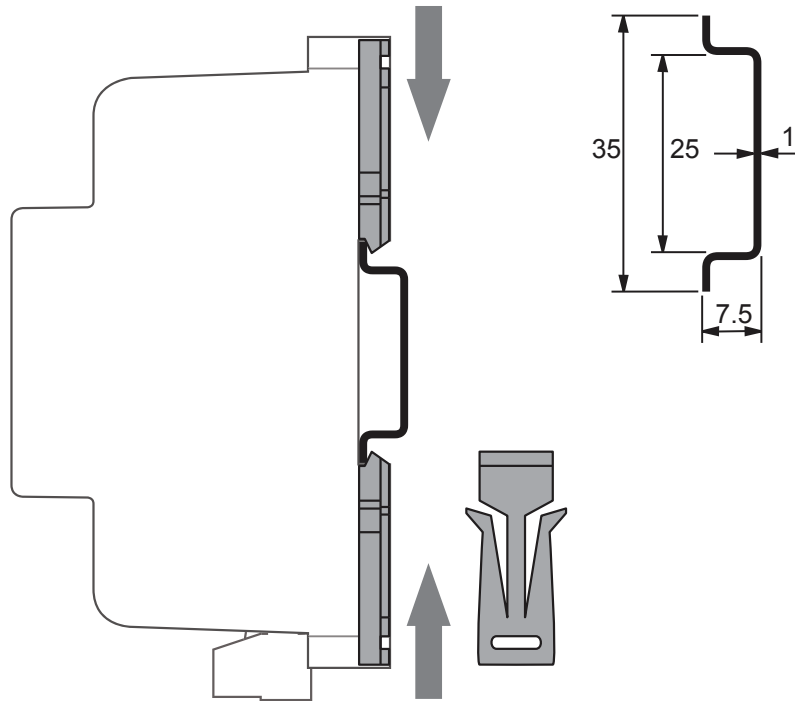

Node ID of CEA-709 Port 1

Virtual (Node) ID of CEA-852 port (Ethernet)

MAC address of CEA-852 Ethernet port

Serial number of the device

