

LIP-ME201C, LIP-ME202C BACnet router

Installation instructions

Instructions de montage







Montageanweisung


Montagevoorschrift

Istruzioni di montaggio

Instrucciones de montaje

Monteringsanvisning

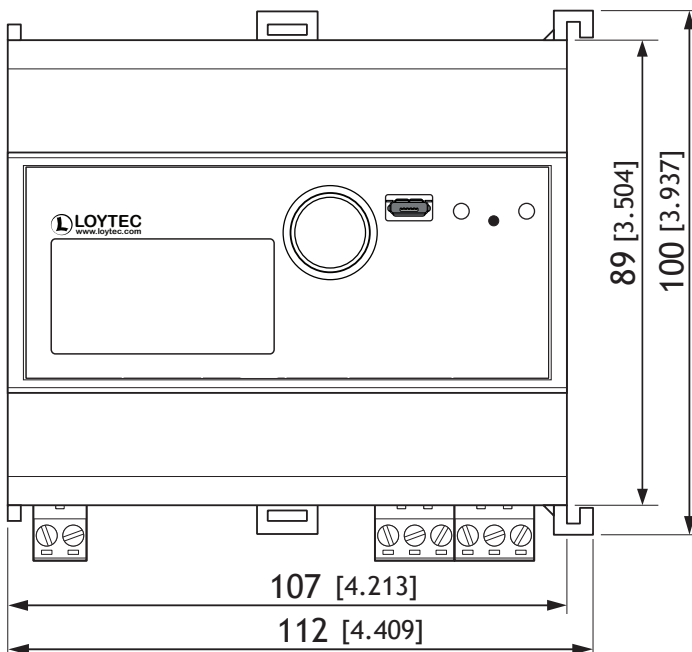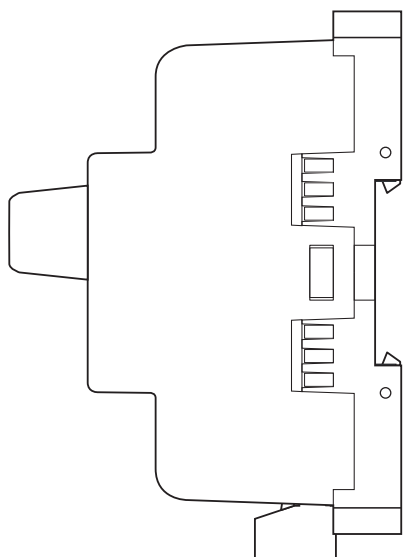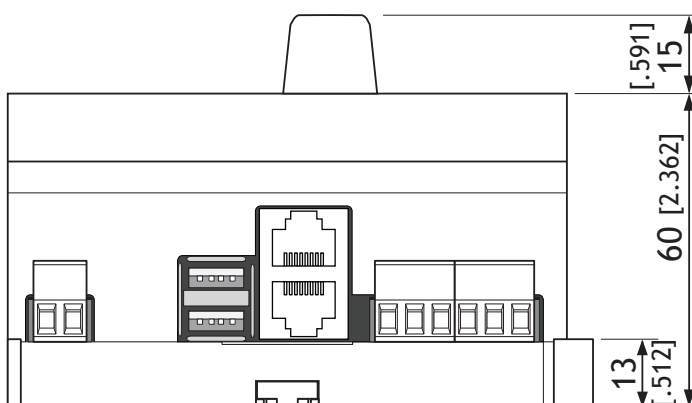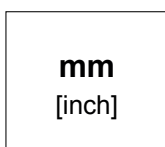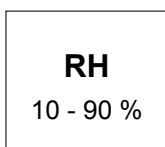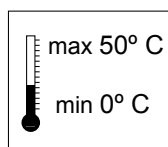

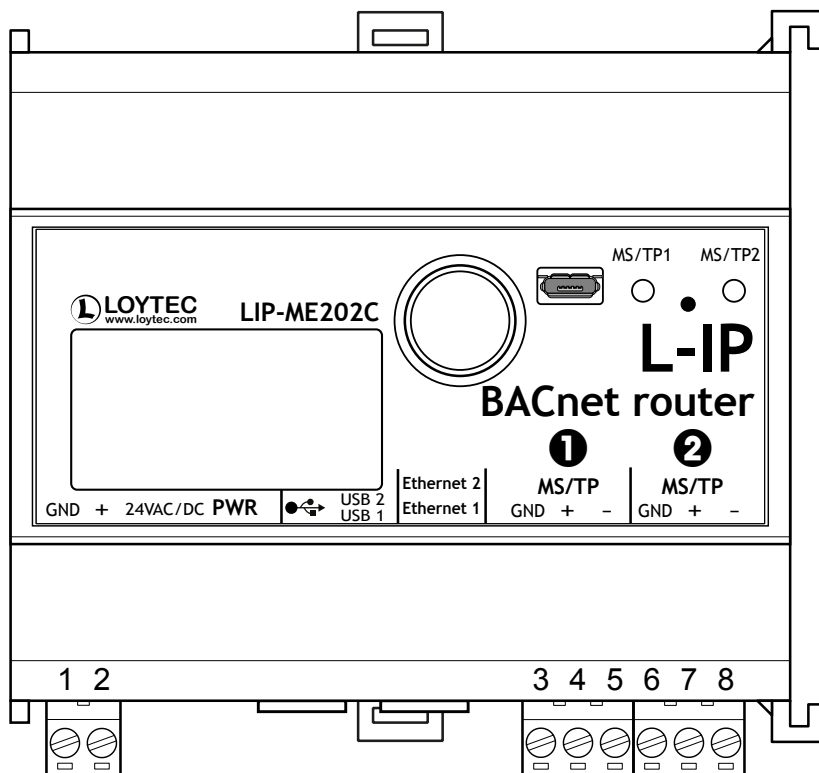



Connectors LIP-ME201C, LIP-ME202C

POWER	1	Power supply input GND
	2	Power supply input PLUS
BACnet MS/TP	3	Input GND
	4	Input +
	5	Input -


Connectors LIP-ME202C only

BACnet MS/TP	6	Input GND
	7	Input +
	8	Input -

Weidmüller
BLZP 5.08
0.2 - 2.5 mm²

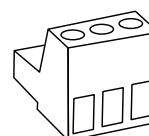

2 poles: Weidmüller BLZP 5.08/02/180
3 poles: Weidmüller BLZP 5.08/03/180

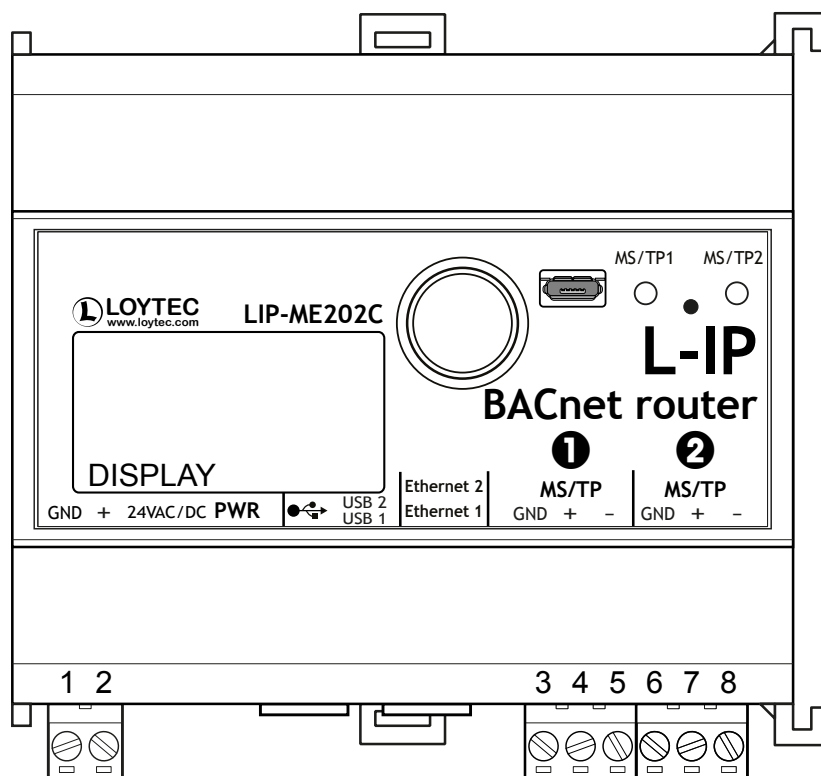

Status LEDs		
MS/TP	GREEN flashing fast ORANGE flicker RED permanent RED flashing fast	Token ok, traffic Single master, traffic Token lost, cable damage Communication errors

Please update the firmware of the device first,
see www.loytec.com

License Notice: This product contains components covered by the GPL and LGPL.
Details on device Web UI or <http://loytec.com/os/>

<http://192.168.1.254>
User: admin

35 mm x 7.5 mm DIN rail (EN 50022, BS 5584, DIN 46277-3)

